
 


Electronic Spark Ignition – Your unit is equipped with an electronic spark ignition system. The system is powered by a 1.5V AA battery. (The battery is located under the stove at the back on the right side)

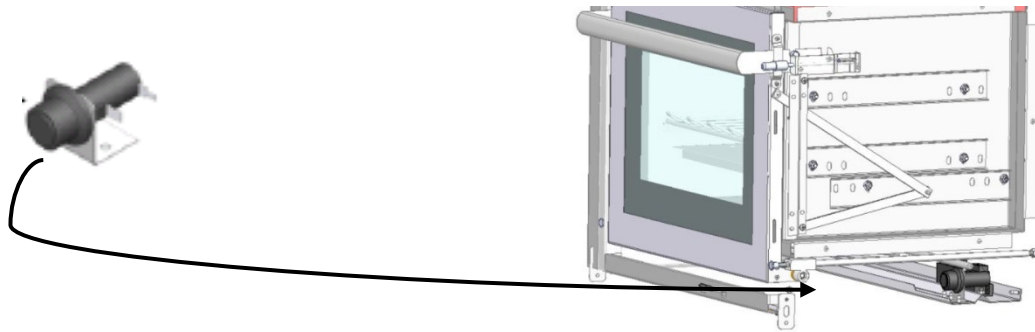

Changing the battery - To change the battery, unscrew the black cap. **Remember to respect the polarity.**



<p>Igniter does not spark</p>	<p>Battery is dead</p> <p>Spark plug is dirty</p> <p>Spark Box has failed</p> <p>Bad switch</p>	<p>Change battery</p> <p>Clean tip of spark plug</p> <p>Replace the spark box</p> <p>Replace switch</p>
--------------------------------------	---	---